



# WINDSTER<sup>TM</sup>

**MODEL : WS-268. WS-288**

## OPERATION MANUAL

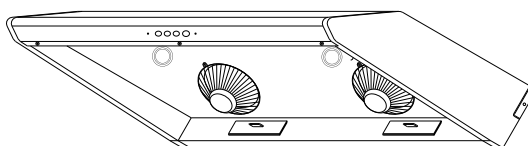

WS-268

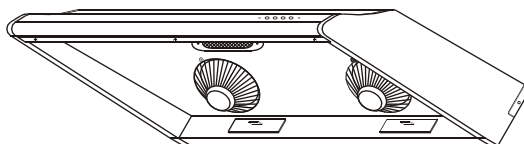

WS-288



Please read and save this guide through before using your range hood.  
Store the guide away in a safe place so that you will know where it is,  
when you want to refer to it.

# Table of Contents

A. Important Safety Instructions .....	P.1
B. Safety Notes .....	P.3
C. Tools and Materials Required .....	P.4
D. Accessory Package .....	P.4
E. Preparing the Range Hood .....	P.5
F. Preparing the Installation Location .....	P.6
G. Providing Electrical Power .....	P.7
H. Mounting Range Hood to Cabinet .....	P.8
I. Mounting Range Hood Without Cabinet .....	P.9
J. Making the Electrical Connection .....	P.10
K. Use and Care .....	P.10
L. Maintenance Instruction .....	P.12
M. Ducting .....	P.12
N. Troubleshootings .....	P.13
O. Halogen light replacement .....	P.13
P. Parts Layout Diagram .....	P.14
Q. Circuit Diagram .....	P.16
R. Size.....	P.17


## WARNING

**Due to sharp edge, please wear**

**"Safety Workman Gloves"**

**for installation, cleaning, light bulb changing and  
dismantling to reduce the risk of any bodily injuries.**

**Safety Workman Gloves**

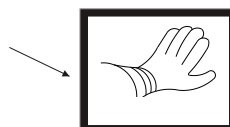

## A. Important Safety Instructions

Read and Save These Instructions

**CAUTION-** To reduce risk of fire and to properly exhaust air, be sure to duct air outside- Do not vent exhaust air into spaces within walls, ceilings, attics, crawl spaces, or garages.

**WARNING-** To reduce the risk of fire or electric shock, do not use this fan with any solid- state speed control device.

**WARNING-** To reduce the risk of fire, electric shock, or injury, observe the following:

A. Use this unit only in the manner intended by the manufacturer.

If you have questions, contact the manufacturer.

B. Before servicing or cleaning the unit, switch power off at service panel to prevent power from being switched on accidentally.

**CAUTION-** For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapours.

**WARNING-** To reduce the risk of a range top grease fire:

A- Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.

B- Always turn hood on when cooking at high heat or when cooking flaming foods.

C- Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan.

D- Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING- To reduce the risk of injury in the event of a range top grease fire, observe the following:

A- SMOTHER FLAMES with a close- fitting lid, cookie sheet, or metal tray, then turn off the burner. Be careful to prevent burns. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.

B- NEVER PICK UP A FLAMING PAN- You may be burned.

C- DO NOT USE WATER including wet dishcloths or towels- a violent steam explosion will result.

D- USE AN EXTINGUISHER ONLY IF:

1. You know you have a CLASS ABC extinguisher, and you already know how to operate it.
2. The fire is small and contained in the area where it started.
3. The fire department is being called.
4. You can fight the fire with your back to an exit.

WARNING- Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as these published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

Keep the range hood clean.

WARNING- To reduce the risk of fire, use only metal duct work.

## B. Safety Notes

1. All electrical work must be done in accordance with local and/or national electrical code as applicable for safety. This product must be grounded if you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified electrician.
2. Turn off power at service entrance before installing wiring or servicing this product. (120 volt for range hood. 220 volt for electric range if any)
3. Turn off power to avoid risk of fire, electric shock, or injury for cleaning or maintenance such as lubrication.
4. Fireplaces, gas furnaces, water heaters, require proper flow of combustion air and exhaust. Make sure this flow is not altered when using any exhaust fan.
5. Please read specification label on product for further information and requirements.
6. Please wear "Safety Gloves" for installation, cleaning, light bulb changing and dismantling to reduce the risk of any injuries.

CAUTION- To reduce the risk of fire and to properly exhaust air, be sure to duct air outside. Do not vent exhaust air into spaces within walls or ceilings or into attics crawl spaces or garages.

## C. Tools and Materials Required

- ▶ Drill, electric or ratchet drive, with 3/16" wood bit (for drilling starter holes and 1 1/4 " wood bit (to drill an access holes in the cabinet or kitchen wall for the electric power line)
- ▶ One common screwdriver.
- ▶ Plier (for opening electrical knockout).
- ▶ Two 1" (thick)x2" (wide)x12" (approximate length) wood strips for recessed bottom kitchen cabinet installation only. (Purchase locally).
- ▶ Electrical wire and supplies to comply with local cords.
- ▶ Four 1 1/4 " long flat head wood screws (purchase locally) to mount wood strips.
- ▶ Pencil and ruler for marking locations. Saber saw or keyhole saw for cutting the 1"x2" wood strips to length.

## D. Accessory Package

1. Wood screws 3/16" x 1" L    6pcs.
2. Wire connector with spring   3pcs.
3. Washer    4pcs.

## E. Preparing The Range Hood

1. Remove the top electrical knockout, you may plan to bring power to the range hood either through the cabinet or through the wall (Fig.1)

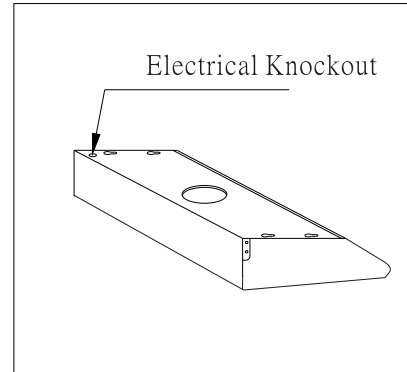


Fig.1

2. Insert a screwdriver into the knockout slot and bend the knockout back and forth. (Fig.2)

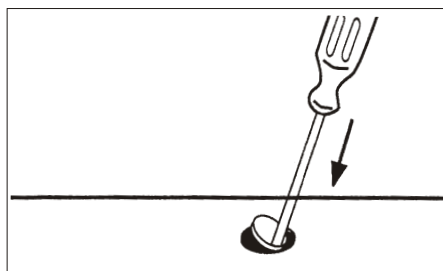


Fig.2

You may have to use pliers to pull the loosened knockout free.



Fig.3

### Note:

When installed, the bottom edge of your range hood should be 28" ~ 32" above the top of the cooking surface. (Fig.4)

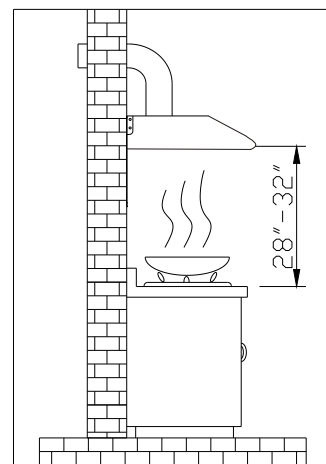


Fig.4

## F. Preparing The Installation Location

Note: Please also refer P.10 "J. Making the Electrical Connection"

1. A. If you want to move the electric range to make room for working on the cabinet turn off the 220 volt power for the electric range at the service entrance.
- B. Before moving a gas range, shut off the gas.

**Note:** Omit steps 2a through 2d if the hood is to be mounted on a cabinet with a flush bottom.

2. For installation onto a recessed bottom cabinet:
  - a. Measure the space (under the cabinet between the inside front edge and inside back edge (Fig.5). With a saber, cut two 1"x2" wood filler strips (purchased locally) to fill in the bottom of the cabinet.
  - b. Start a  $1\frac{1}{4}$ " long wood screw (purchased locally) about 3" from each end of the 1"x2" wood strips (Fig.6)
  - c. Position the strips on the cabinet bottom and screw the strips securely to the cabinet (Fig.7)
  - d. For a more secure installation, drill four  $\frac{3}{16}$ " holes from inside the cabinet, down into the wood filler strips. Insert screws into the starter holes in cabinet and tighten screws until wood filler strips are secured under cabinet.
3. Center the hood in place beneath the cabinet and flush with the front of the cabinet. Mark the following:
  - a. The four keyhole mounting slots for the hood. Mark these onto the bottom of the cabinet; or, if the cabinet bottom is recessed. Onto the wood strips (Fig.7)
  - b. The electrical knockout hole. (Fig.1)

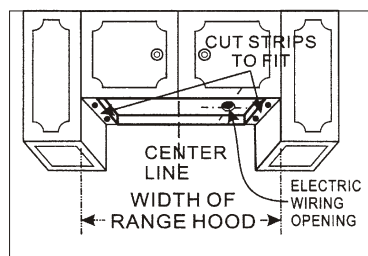


Fig.5

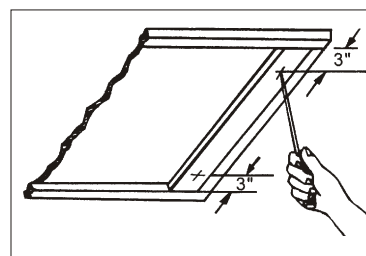


Fig.6



4. Screw the four 1" wood screws (for mounting the hood) into the exact center of the arrow and of the keyhole mounting slots marked on the cabinet bottom (for flush installations), or marked on the 1"x2" wood strips (for recessed cabinet installation) (Fig.7)

Do not turn the mounting screws in all the way. Allow 3/8" of screw to project, so the hood can be fitted place. (The screws will be tightened later)

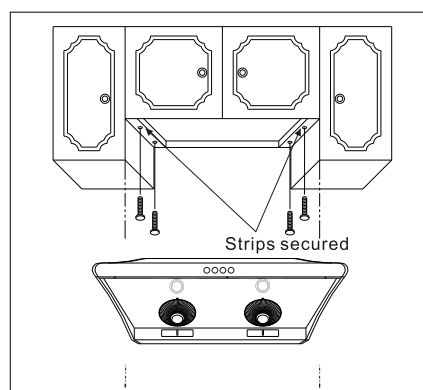


Fig.7

## G. Providing Electrical Power

Note: Please also refer P.10 "J. Making the Electrical Connection"

1. After turning off the proper 120 volt circuit at the service entrance, drill out the electrical power line access hole marked on the cabinet bottom or wall. Use a 1 1/4 "wood bit. To operate the electric drill, use an extension cord connected to another circuit. (Fig.8)
2. Fish the electrical power line through the access hole drilled in the wall or bottom of the cabinet. Attach an appropriate connector (purchased locally) to the end of the power line for the type of wiring being installed. Follow all codes. (Fig.9)

### Safety Warning:

If drilling into the walls, be careful not to cut existing electrical cables, which would create a hazard.

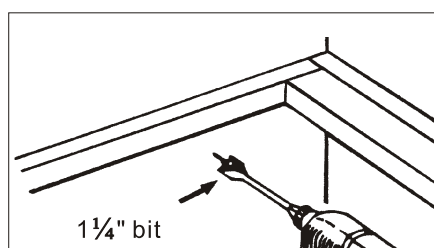


Fig.8

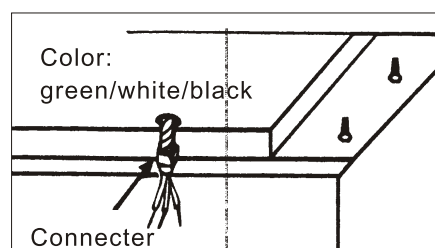


Fig.9

## H. Mounting Range Hood To Cabint

Note: Please also refer P.10 "J. Making the Electrical Connection"

1. Position the hood in place so that :
  - a. The electrical line is routed through the appropriate Knockout opening. This step will have to be accomplished while positioning the hood (Fig.10)
  - b. The large part of the keyhole mounting slots on the hood fit onto the hood mounting screws projecting from the bottom of the cabinet. (Fig.11)
2. Adjust the hood so the front is flush with the cabinet front.
3. Tighten the hood mounting screws all the way into the cabinet or into the 1" x 2" wood strips so the hood is secure.

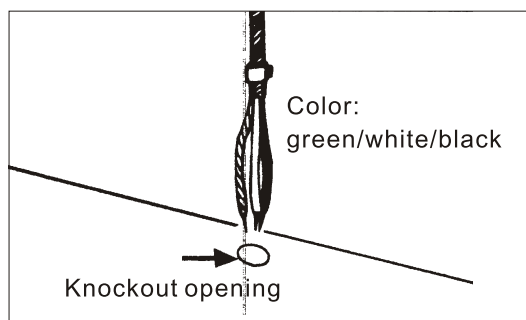


Fig.10


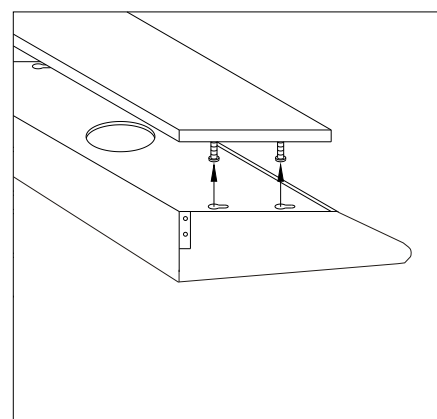


Fig.11


## I. Mounting Range Hood Without Cabint

Note: Please also refer P.10 "J. Making the Electrical Connection"



1. Using metal brackets and screws (included), center hood onto board and install screw.

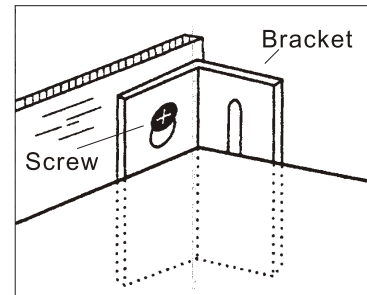

2. Remove the hood from the board and nail the wood board onto the wall. (Be sure the nail is in the center of the stud)

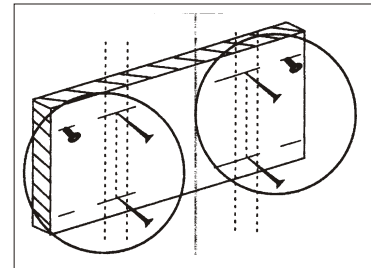

3. Place the range hood on the board and tighten the screw.

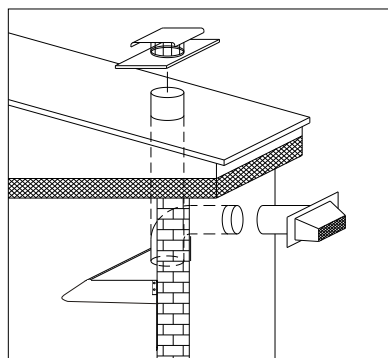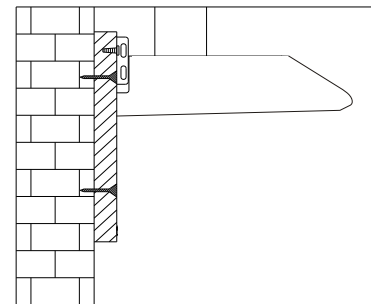

4. Complete finished

## J. Making the Electrical Connection

1. Turn the three nuts at the front of bottom board. ( Fig.13)

2. Remove screws on wiring case,  
fish out wires through the  
knockout. (Fig.12)

3. Mark the electrical connection by  
fastening all wires to the existing  
wall wiring according to the their  
colors. (Black to Black, White to  
White, Green to Ground)

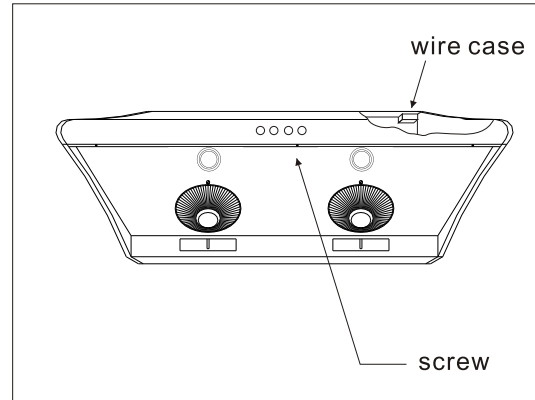


Fig.12

4. After connection is done, reinstall wiring case cover and bottom board.

5. Slide plastic collection cups onto the back metal mounting.

6. Turn on power and check operation of fan and light.

## K. Use and Care

### **Note:** Model : WS-268

Operate switches ( Fig.13 )

Switch 1 : LED Speed Indicator.

Ⓜ - High speed Ⓛ - Low speed

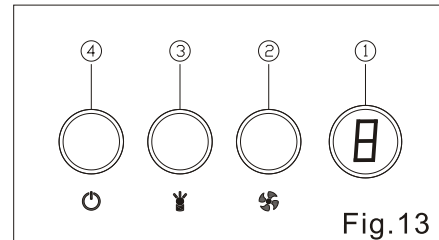


Fig.13

Switch 2 : Speed switch (Six speed fan shifts, 3 -> 2 -> 1 -> 6 -> 5 -> 4 -> 3 -> 2 -> 1).

Switch 3 : Light switch (individual control in three light levels.)

Switch 4 : Power switch and delay switch.

Push once : Delayed shut off.

Push twice : Immediate shut off.


When press switch 2 the fan speed starts from the 3rd speed,

press again the fan speed shift to the 2nd speed.

The shift sequence is as following, 3 -> 2 -> 1 -> 6 -> 5 -> 4 -> 3 -> 2 -> 1 .

**Note:** **Model : WS-288**

Operate switches. ( Fig.14 )

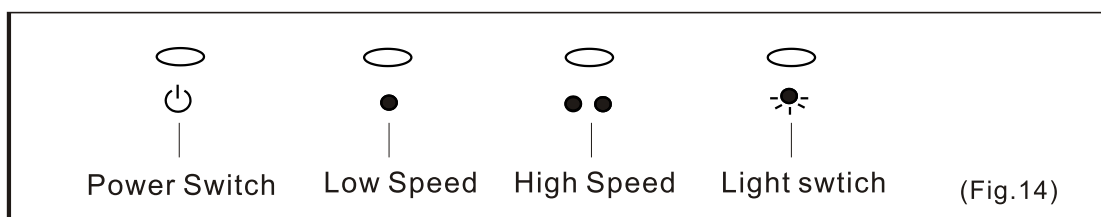

**TURN ON :**

- Press the speed control (Low Speed, High Speed) switch to select the desired level of power.
- Press Light Switch to turn on the lights.

**TURN OFF :**

- Press the Power Switch to turn off the power.
- Press Light Switch to turn off the lights.

**Note:**

Range hood should be turn on either before or the same time when cooking begins. After cooking, range hood should be kept on for about 3 more minutes for complete ventilation of cooking odor.

**Care Instruction :**

Please always pull the plug out before cleaning or dismantling, wear " Safety gloves " to reduce the risk of any injuries.

Exterior : Can be clean with any type of non-abrasive detergent and a clean cloth. " Green Pad " or any metal type cleaning pad is not recommended for exterior.

- Interior :
1. Switch ON the fan at High, mix mild detergent with water in mist-sprayer, at fine-spray mixture on to the blades for 60 seconds with the fan running. ( mist sprayer is not included)
  2. Leave fan on for an additional 3 minutes to dry oil basin.
  3. Repeat on other turbine vane (can be cleaned simultaneously with the first).

## L. Maintenance Instruction

1. Maintenance shall be important than repair. Please take care of the needed maintenance in order to secure and extend the excellent functions and using life.

### Note :

Before repairing the range hood. Disconnect the power source.

2. After using the machine, wipes the machine by neutral detergent in order to keep it clean and maintain the appearance with brightness and sanitation.
3. When the level of dirty oil of the collector reached 4/5 of height, it has to be removed in order to avoid overflowing and pollution.

## M. Ducting

This style of range must be vented via ducting to the outside of the house. Follow general rules when ducting the hood: Use correct size of ducting (6" round), do not reduce size of ducting, make all turns gradual, no short corners. If ducting ran will be longer than 10 feet enlarge duct by at least 1" inch diameter after each 10 feet. Tape all joints in ducting and all gasketed openings on hood for a tight seal.

For round ducting from the top:

Fit the gray or white plastic (Included) over the circular opening on top in order to provide a tight seal for ducting to attach to. The GRAY or WHITE ring is designed to fit 6" ducting.


## N. Troubleshooting

Symptom	Correction
Fan are not operatable.	<p>A. Check power source to see if it is normal.</p> <p>B. Check power inlet plug to see if it is plugged firmly into it's socket.</p>
Illuminating indicator lamp burned out light.	<p>A. Disconnect the power source.</p> <p>B. Check lamp bulb, replace it with a new one if it is burned out.</p>
Hood vibrates.	<p>A. Check for damaged vanes.</p> <p>B. Check if exhaust duct is secured.</p>

## O. Halogen light replacement

**Note:** The halogen light will be very hot when it is working Never touch it with bare hand.

Before changing halogen light ensure the unit is switched off and the halogen light is cool.

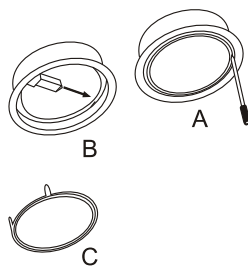


**Model : WS-288**

Halogen light spec: 12V / 20W

**Note:** Ensure the unit is switched off. Before changing lamp.

- Using suitable tool (small screw driver) gently pry off the lamp cover len.
- Remove the unserviceable Lamp. Replace the removed lamp with serviceable new lamp, taking note not to touch the glass lamp surface with your bare fingers. (Use a suitable cloth).
- Replace the len cap and reconnect the power and test lamp.


## P. Parts Layout Diagram

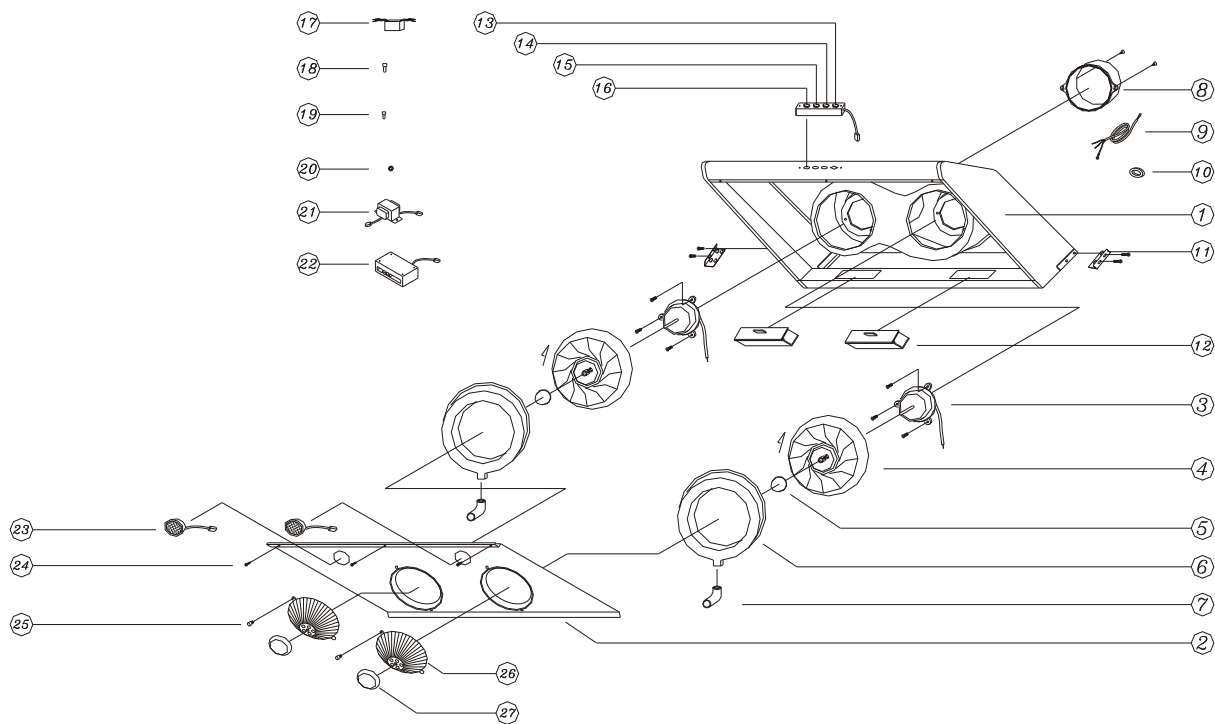

### Model : WS-268

1	Machine body	11	Hanging bracket	21	Transformatioern
2	Bottom board	12	Oil collector	22	IC
3	Motor (left and right)	13	LED indicator	23	Halogen Light
4	Fan (left and right)	14	Speed switch	24	Screws for Bottom board
5	Fan cap	15	Light switch	25	Screws for safety mesh L/R
6	Oil basins L/R	16	Power switch	26	Safety mesh L/R
7	Oil pipe	17	Capacitor	27	Small oil cup
8	Exhaust pipe connector	18	Wire connector (Large)		
9	Power cord outlet for wiring	19	Wire connector (Small)		
10	Cord bushing (Large)	20	Cord bushing (Small)		




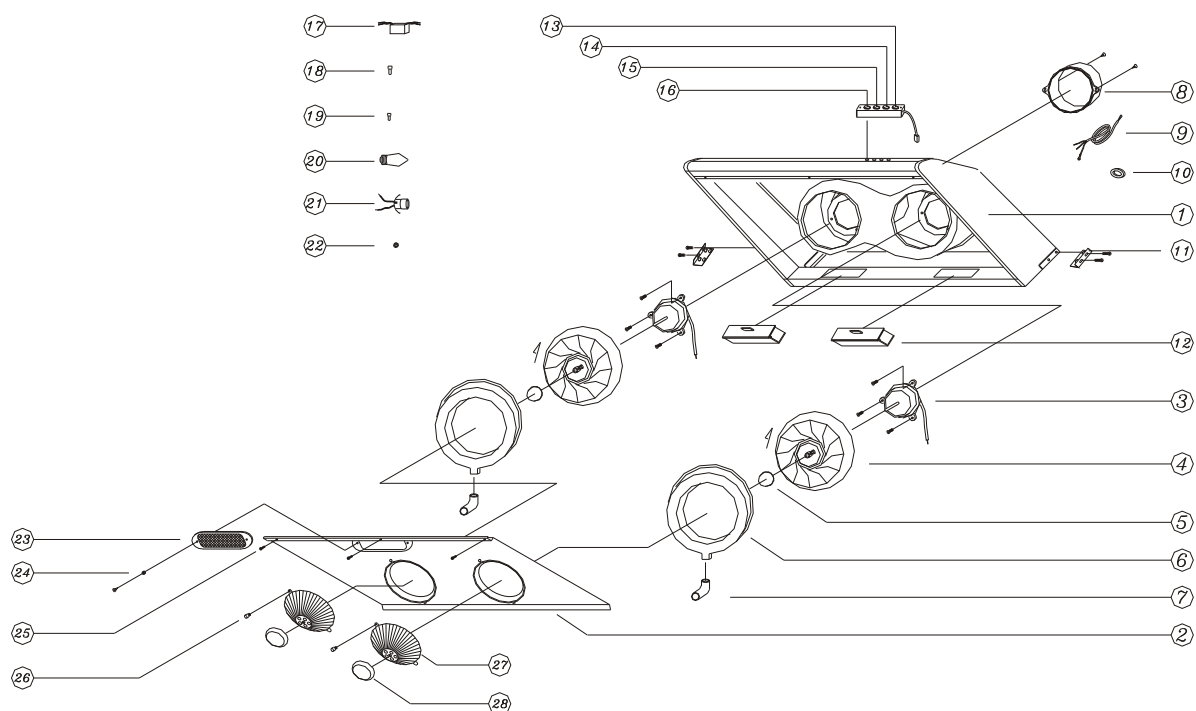


## Model : WS-288

1	Machine body	11	Hanging bracket	21	Light bulb socket
2	Bottom board	12	Oil collector	22	Cord bushing (S)
3	Motor (left and right)	13	Light switch	23	Light cover
4	Fan (left and right)	14	Speed switch (Low)	24	Screws for Light cover
5	Fan cap	15	Speed switch (High)	25	Screws for bottom board
6	Oil basins L/R	16	Power switch	26	Screws for safety mesh L/R
7	Oil pipe	17	Capacitor	27	Safety mesh L/R
8	Exhaust pipe connector	18	Wire connector (Large)	28	Small oil cup
9	Power cord outlet for wiring	19	Wire connector (Small)		
10	Cord bushing (Large)	20	Light bulb		


### Q. Circuit Diagram

NOTE : Any faults with this unit should only be attended to by a qualified technician.

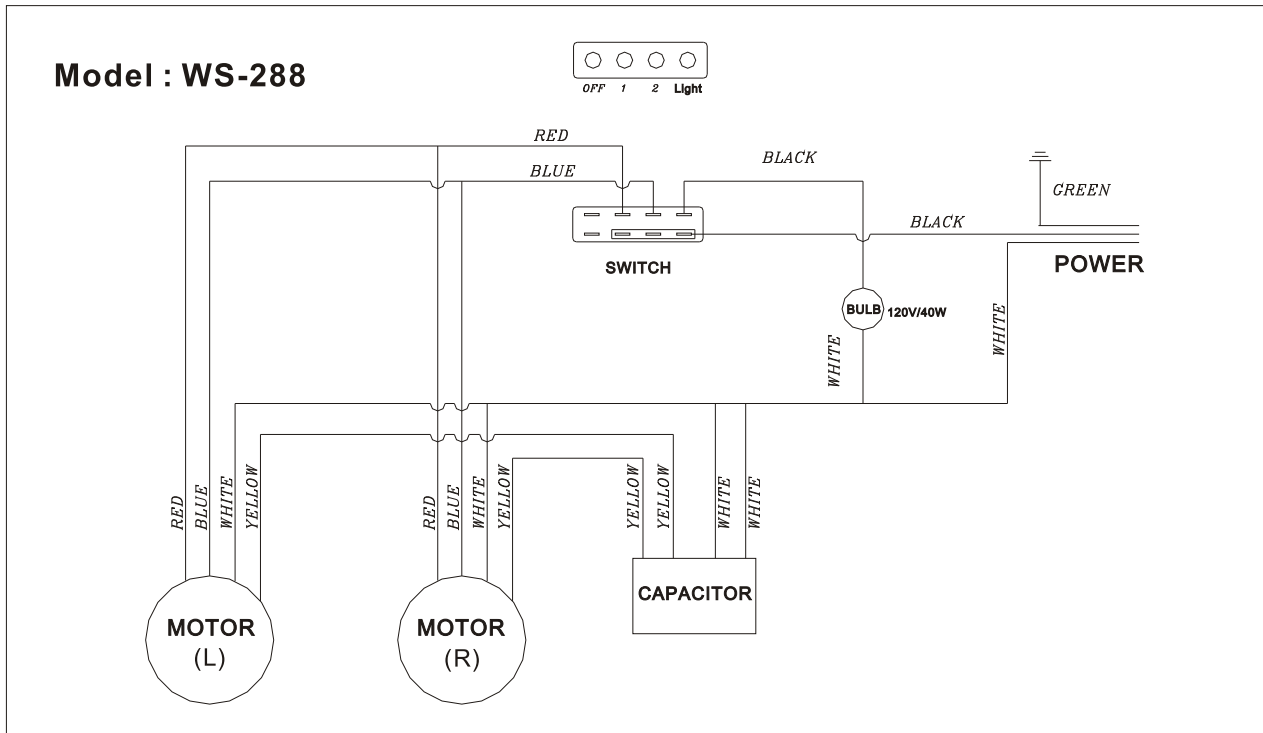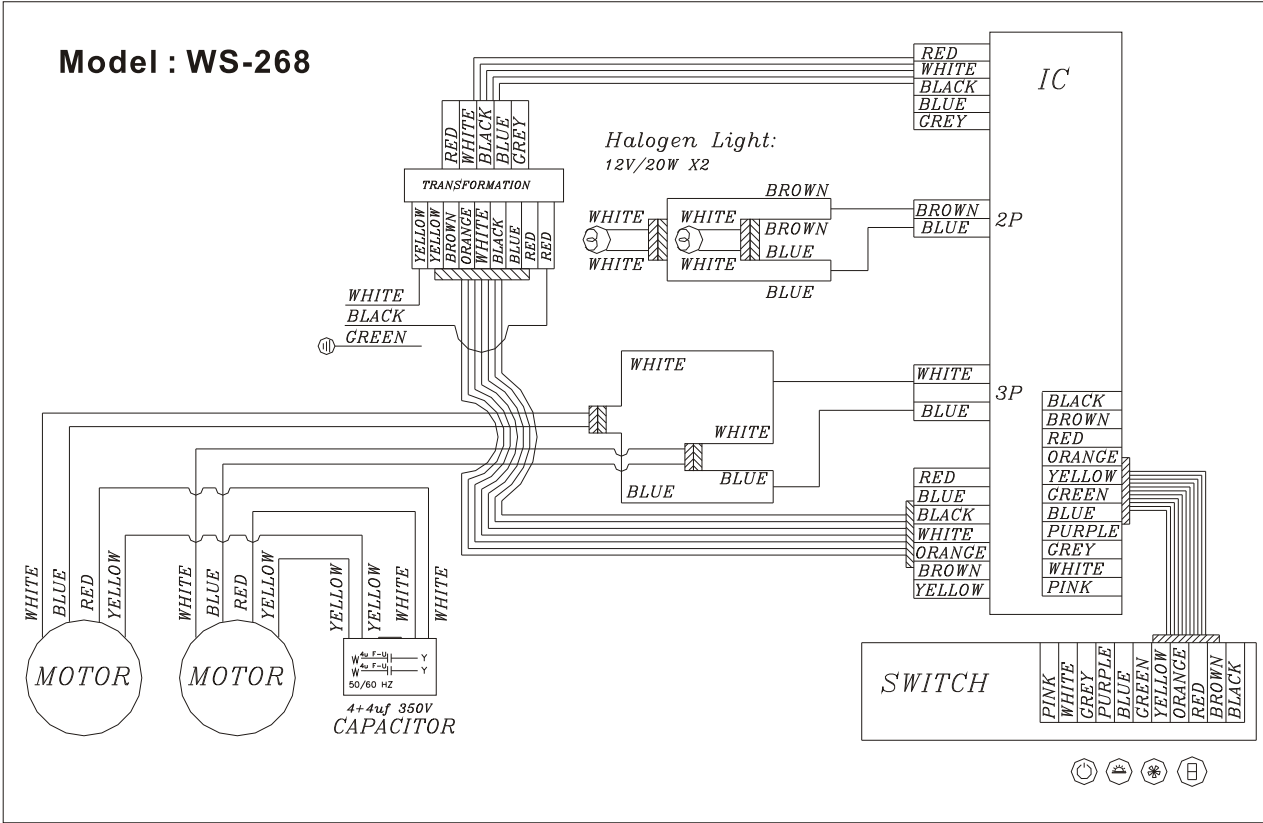

## R. Size

MODEL : WS-268

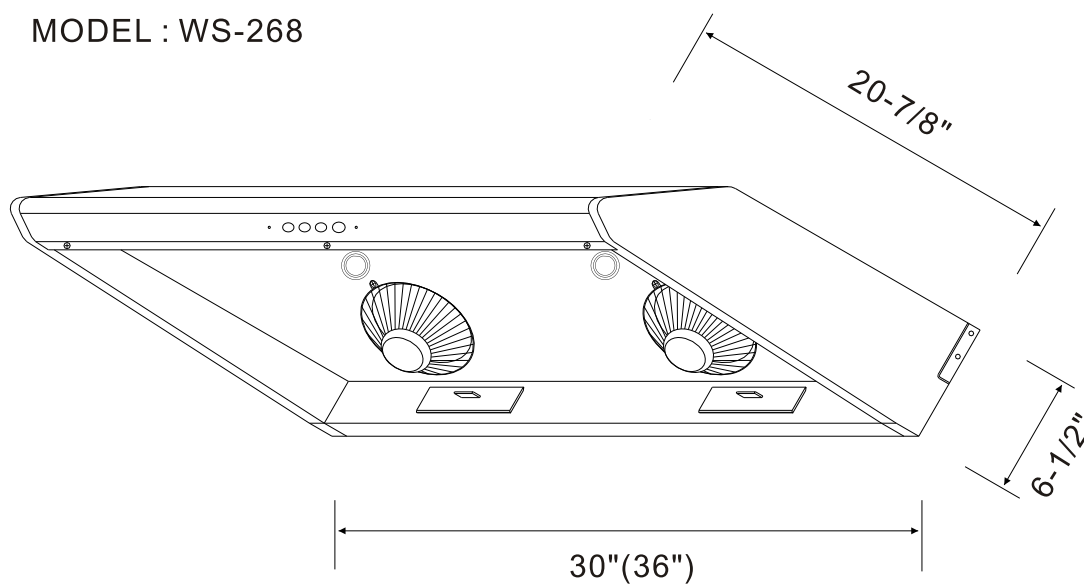

MODEL : WS-288

